



1. Tools required for installing the screen panels are:
- a utility knife with a new blade
 - a portable drill & square drive bit
 - a hand stapler (See Cupola Screen installation).



2. Included with your screen package are screen panels, trim strips, and all of the hardware needed to properly install the screens.



3. Remove the protective wrapper by carefully slitting a corner (Without touching the screen) and folding it back. Make sure that the plastic is free of the panels and do not force a panel out of the package.


Note - If you have an Electrical Package Skip to Step 6.




4. Begin by attaching a T-Shaped Trim strip to center back post. Be sure the strip is centered on post.

Note: Screens are installed on the Inside of the Gazebo.

Note: L-Strips are to be used beside doorways and T-Strips are for between Rails sections.

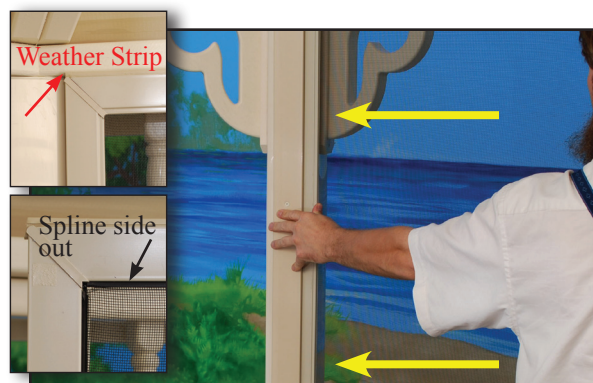

5. Using the grip shown in the above picture press the screen frame firmly into the trim. Note: Notice that the screen panels are installed with the weather stripping at the top against the plate. Also note that the screen has a spline side and a plain side. Position the panel with the spline out. Use one screw per trim piece to start. - Skip to Step 7

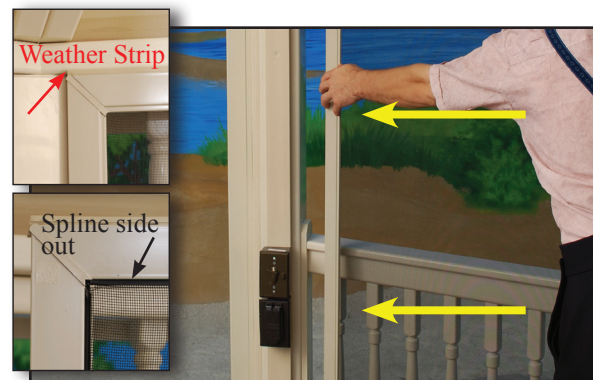

6. Begin by sliding a screen section behind the trim where an electrical switch or receptacle box is located. If you have multiple electrical locations, start a panel to the left and right of each receptacle box. Note: Notice that the screen panels are installed with the weather stripping at the top against the plate. Also note that the screen has a spline side and a plain side. Position the panel with the spline side out. Use one screw per trim piece to start.



7. Secure the panel in place by driving a screw through the trim piece in a pre drilled hole. Screw should be driven only to the head (not deeper into the plastic) so that they can easily be removed for repair when necessary or for winter storage if desired. Position the next panel for installation. Repeat step #5 & 7 until all panels are secure.



8. With all panels in place, secure each panel completely using (4) 2.1/2" screws per T or L Strip. Strips should be centered onto post if possible. Screws should be driven in even with the surface of the strip.


Note: Do Not sink screw deeply into strip.

Pagoda Roof Screens



9. Gazebos with a pagoda roof have a second set of screens installed around the top. Center the panels with top edge tight to the plate above them and secure as shown. Use (4) 1" Pan head screws per panel into pre-drilled holes.

Cupola Hole Screen - Kit Gazebos Only

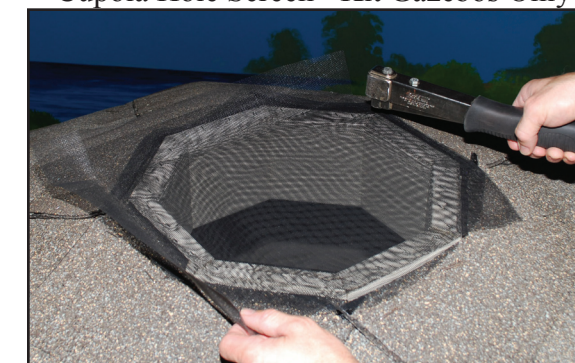

10. Cupola screens are simply stapled to the top edge of the opening as shown above and trimmed to the shape before installing the cupola.

Note: If you purchased an assembled gazebo the cupola screen will be pre-installed.



Screen Installation Instructions



Wood & Vinyl
Octagon & Oval