


Pergola Header Attachment to Home



Fasten pre assembled 2x6 & 2x4 Header Plate to house wall using 4" SS Screws every into studs of house wall alternating one near top and one near bottom as shown with black arrows, counter sink screws below surface.

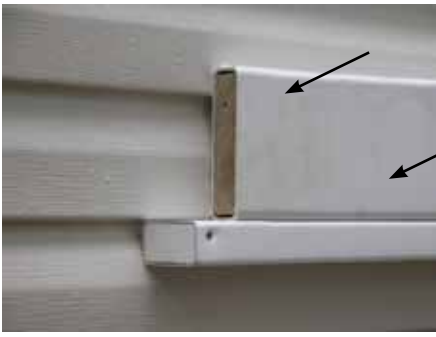

Attach 2nd 2x6 Board to the Header Assembly to cover screws going into house wall (as shown). Using 2.1/2" Pan Head Screws every 16" throw pre drilled holes alternating one near top and one near bottom.



Apply Caulk at top of header and house wall to prevent water from running behind Header Plate. And also to keep water from entering house wall through screw holes.



Place Side Header onto installed Header Plate (as shown). Install Posts on opposite end as shown in Pergola assembly manual.



Ensure Header is Flush at bottom and fasten using (4) 2.1/2" Panhead Screws (as shown with red arrows).



Fasten Top of Headers together using (2) 2.1/2" Panhead screw, toed (Shown with yellow arrows). Install opposite side header by repeating previous 3 steps.

Caution: Some townships may have requirements to remove siding and install Flashing. If your township has these or any other requirements please observe all local codes.